

## How to update Firmware-VP2160

Version: **V1.18e**

Release note: **Improve the compatibility with XD M type 2GB card and XD H type cards**

**Step 1** : Check the Windows OS of your computer :

Windows 98 – Please install the driver before updating the firmware.

Windows 2000 – Do not support Windows 2000 SP1 & SP2. Please upgrade to SP3 or SP4 and update the firmware without driver.


Windows XP – Support to update the firmware directly without driver.

Windows Vista – Support to update the firmware directly without driver.


**Step 2** : Connect the device to the computer.

**Step 3** : Double click "Ps0Av44m.exe" to run the program.


You should see the following screen.

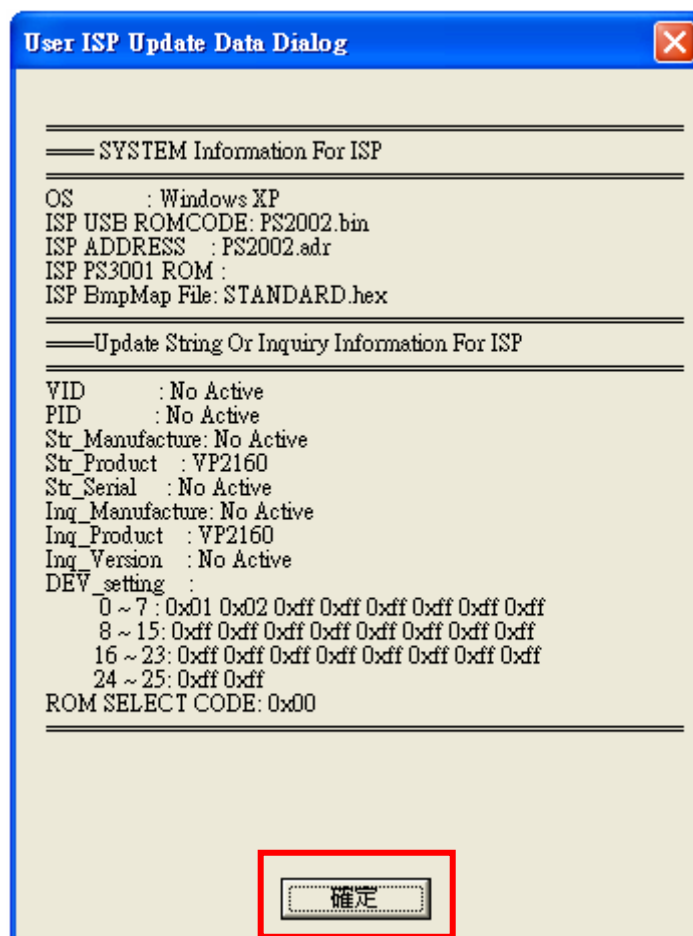


**Step 4 :** Press OK and you should see the following screen.

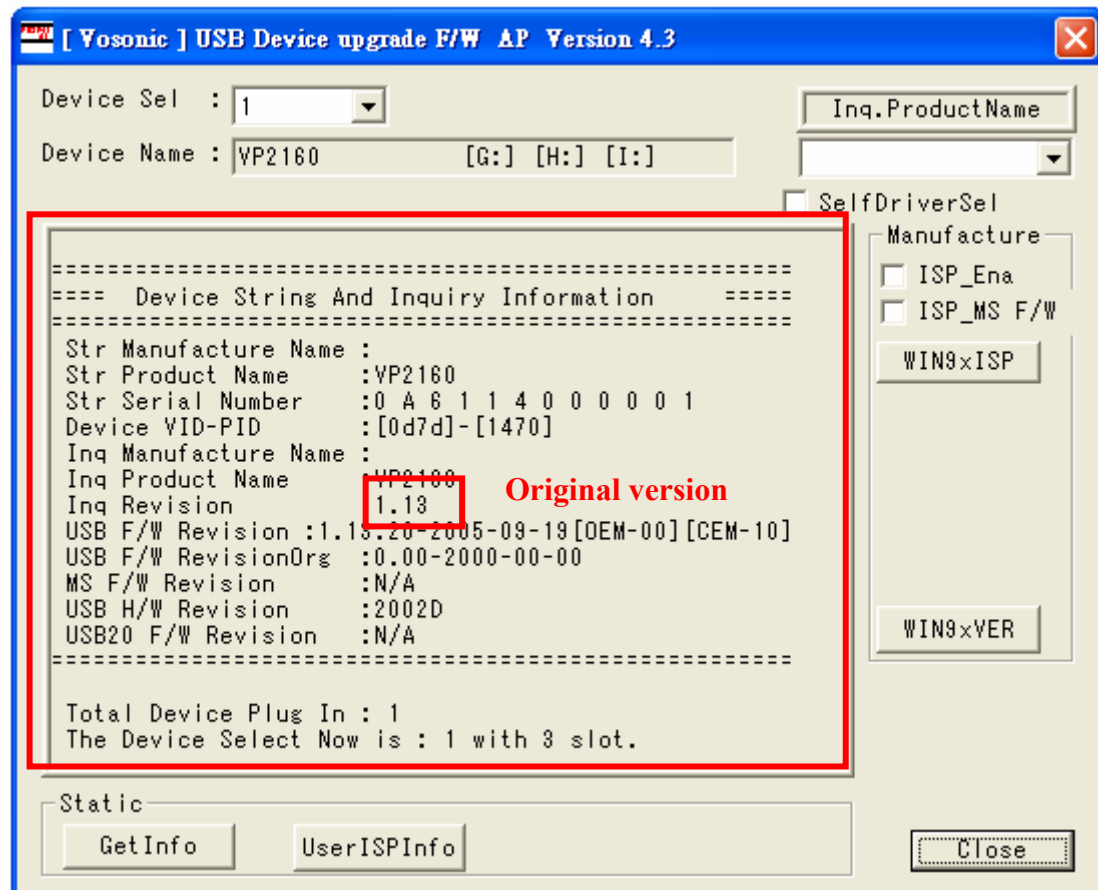



**Step 5 :** Tick "ISP\_Ena"

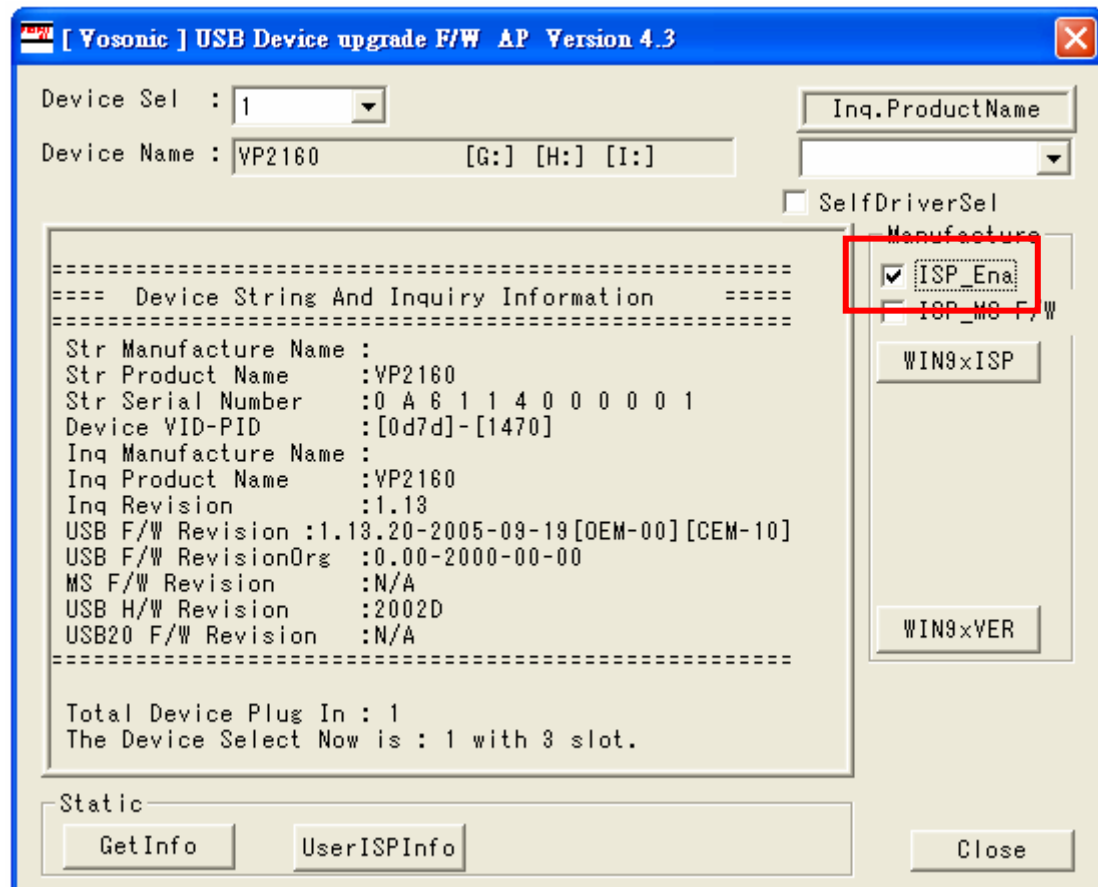

**Step 6 :** Press " WIN9xISP" to begin updating.

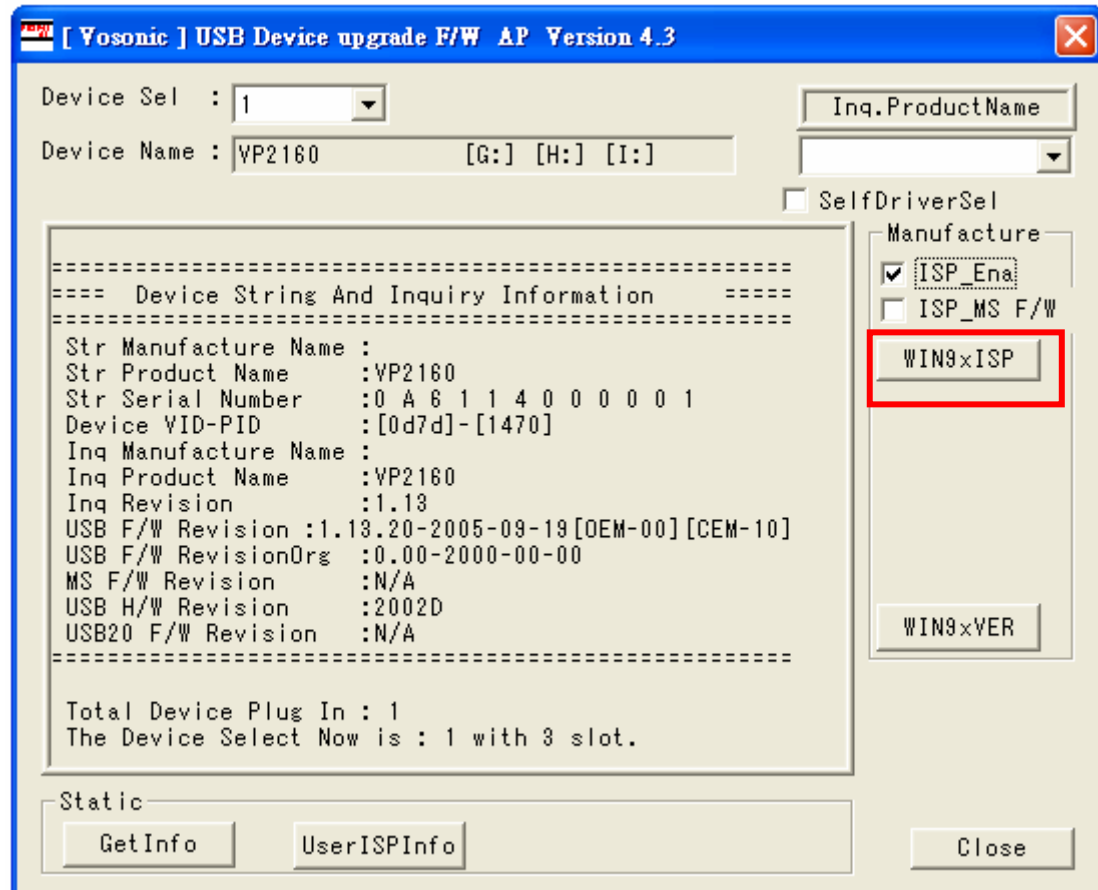


**Step 7 :** When finished, some message as below will be displayed.

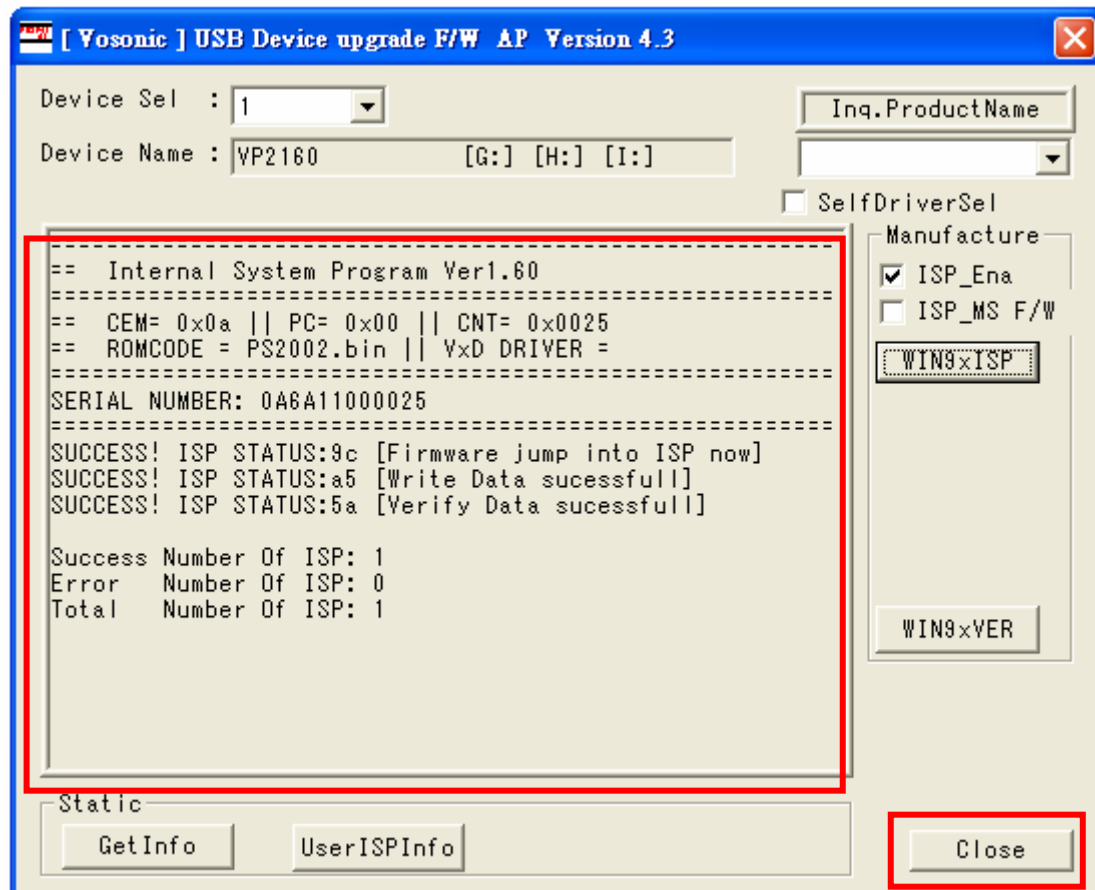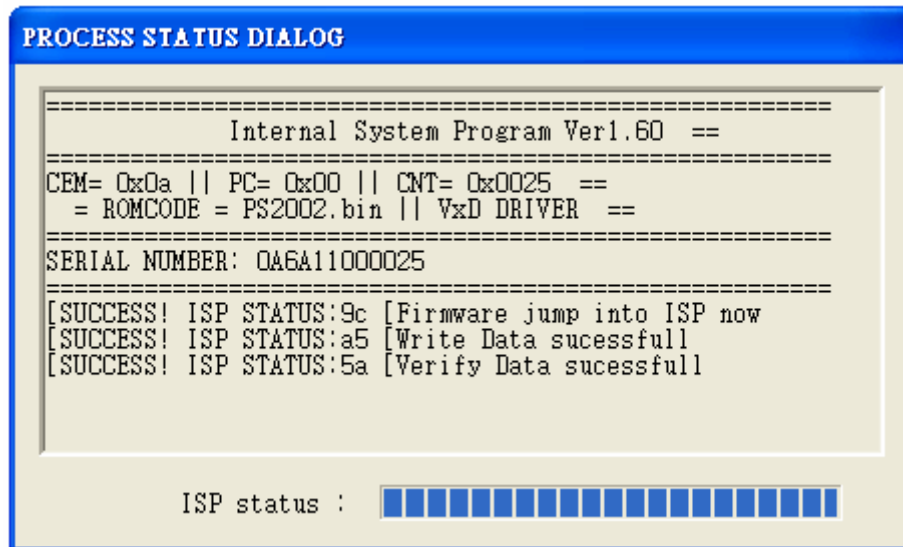

**Step 8 :** The update is finished. Press "Close" to close the program. Remove the USB connection and press "RESET" to power on the device again. Then the screen will show V1.18e.

**Step 9 :** If you want to check if the correct information has been updated, re-connect the device to computer. After the computer recognizes the device, double click "Ps0Av44m.exe" again to check the current version.

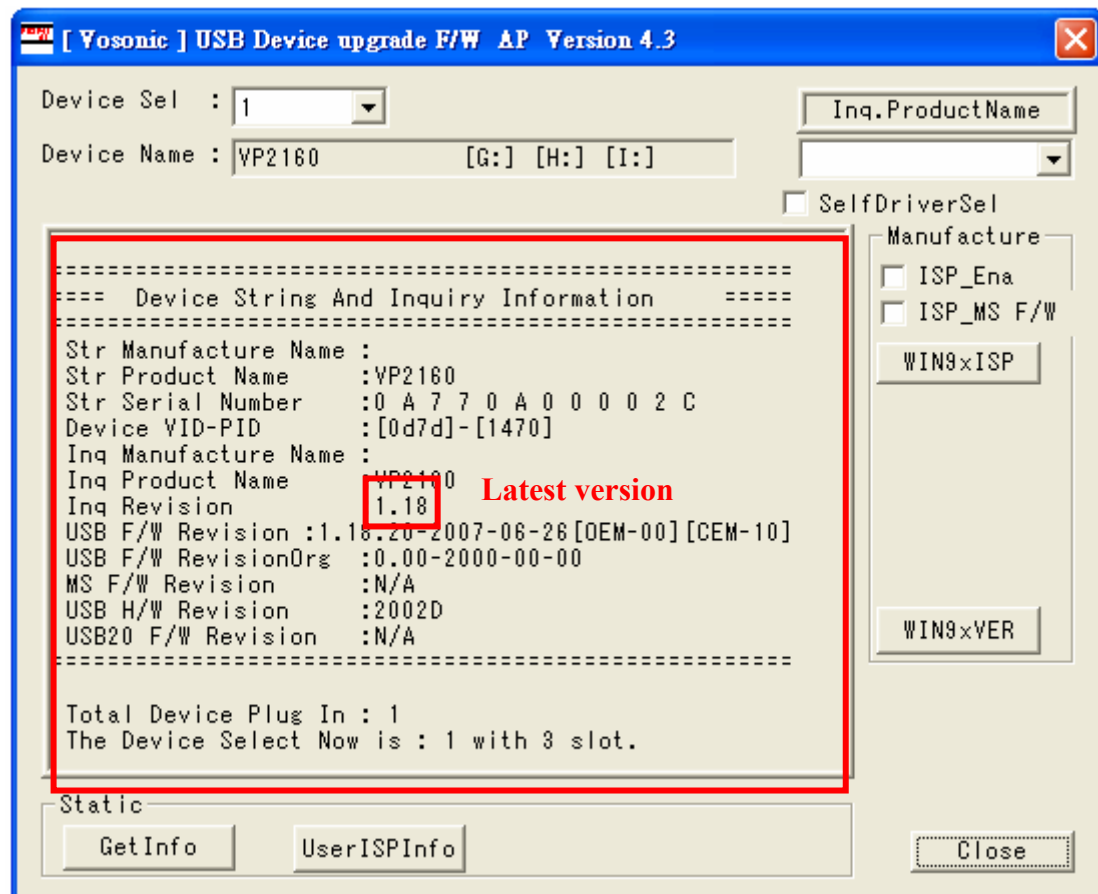

The version has been updated to latest V1.18e.

**If you have any questions or comments, please feel free mail to**

**[service@vosonic.com.tw](mailto:service@vosonic.com.tw)**

**Vosonic Technology Corporation Homepage: [www.vosonic.com](http://www.vosonic.com)**

**7F., No.159 ,Hsien-Cheng 9th Road, Chu-Pei City , Hsi-Chu, Taiwan**

**TEL: +886 3 555 7745 FAX: +886 3 555 0390**